ANKANG

浙江安康制冷设备有限公司

Zhejiang Ankang Refrigeration Equipment Co.,Lid.

活塞式制冷压缩机

Piston Compressor

QR3-134

产品规格书

Product Specification

修订记录 Revision Record			
版本 Revision	修订人 Reviser	描述 Description	日期 Date
A		发布	25/8/1

审核人 Checked By 日期 Date

批准人 Approved By 日期 Date

1 规格参数 Specification

1.1 基本参数

压缩机型号 Compressor Model	QR3-134
压缩机类别 Compressor Type	活塞式压缩机 Piston Compressor
应用 Application	空调 冷冻冷藏 Medium/high back pressure
制冷剂 Refrigerant	R404A
排气量 Displacement(cc/Rev)	134.8
重量润滑油类别 Oil Type	POE
粘度（sCt,40℃） Viscosity	32
加油量 Oil Charge (mL)	2000
额定转速 Rated Speed (r/min)	2900
IP 等级 IP Class	IP21
压缩机颜色 Compressor Colour	黑色 Blaclk
吸气管螺纹（ID OF SUCTION TUBE）	1 3/4''-12 UNF
排气管螺纹（ID OF DISCHARGE TUBE）	1 1/4''-12 UNF
工艺管内径（ID OF PROCESS TUBE）	Ø 7 ±0.2

1.2 性能参数 Performance Specifications

制冷量 Cooling Capacity (W)	18230
制冷量 Cooling Capacity (BTU)	62160
输入功率 input Power (W)	7400
制冷能效比 COP (W/W)	2.7
制冷能效比 EER （BTU/WH）	8.5
运行电流 Rated run Current （A）	11.7
噪声（声功率级） Sound Power (dBA)	≤ 65

测试工况 Test Condition

	蒸发温度 ℃ Evaporating Temp.	冷凝温度 ℃ Condensing Temp.	吸气温度 ℃ Suction Temp.	液体过冷度 K Liquid Subcooling	环境温度 ℃ Ambient Temp.
中、高回压、空调 M/HPB-AC	+7.2	+54.5	+35	8.3	+35
低回压 LBP	-23.3	+54.5	+32	22.2	+32

1.3 电气特性 Electrical Characteristics

电机类型 Motor type	3PH
电机极数 Motor Poles	2
电机电源 Power Supply	380--400V 3~ 50Hz 460v 3~ 60Hz
启动电容 Starting capacitor (μF/V)	/
运行电容 Running capacitor (μF/V)	/
启动继电器 Potential Relay	/
绕组电阻 Winding Resistance (Ω 25℃)	2.0
堵转电流 Locked Rotor Current (A)	70
绝缘等级 Insulation Class	F
电气强度 Dielectric Strength	2000VAC/1S/5mA

1.4 安全运行限制 Safety Running Limitation

气密性压力测试 (Mpa) Tightness Test Pressure	2.2
高压侧最大运行压力 (Mpa) High Side Max Running pressure	3.2
低压侧最大运行压力 (Mpa) Low side Max Running Pressure	2.0
排气温度上限 (℃) Discharge Temp.Limit	≤125

2 压缩机保护 Compressor Protection


2.1 电机保护 motor protector

内置式保护器 Internal Protector For Motor Protection

2.2 压力保护 High Pressure Relieve

内置压力保护 Internal Pressure Protection

3 运行范围 Running Envelope

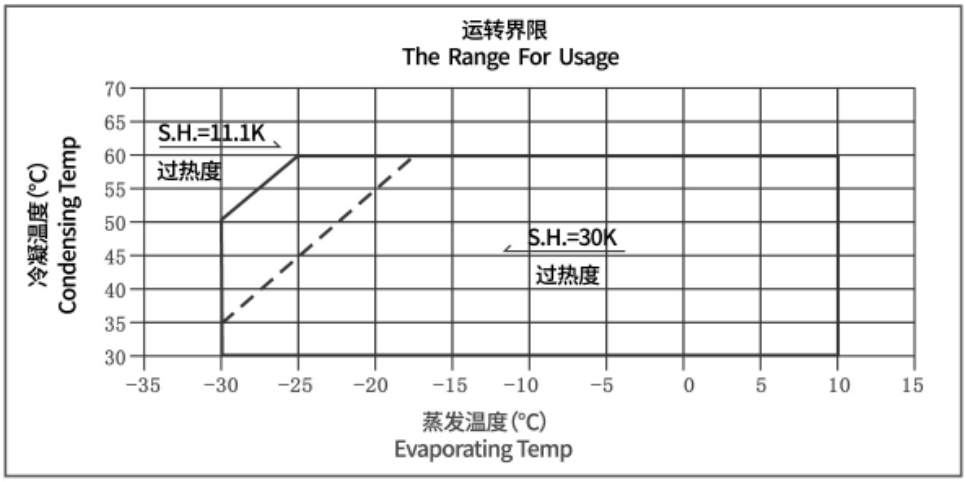

4 性能参数

Performance date **type** QR3-134

Performance date at 50Hz

Refrigerating capacity (watts)

evaporating temperature ℃	Condensing temperature ℃						
	30	35	40	45	50	55	60
-20	8242	7806					
-15	10923	10416	9359	8257			
-10	14138	13534	12270	10950	10274	8905	
-5	17968	17239	15716	14123	13305	11645	9976
0	22494	21615	19782	17865	16881	14880	12865
5	27801	26748	24557	22269	21096	18712	16312
10	33978	32729	30138	27440	26059	23255	20443

Motor input (watts)

evaporating temperature ℃	Condensing temperature ℃						
	30	35	40	45	50	55	60
-20	3454	3481					
-15	3984	4036	4110	4140			
-10	4515	4594	4722	4806	4830	4843	
-5	5046	5154	5339	5479	5532	5600	5617
0	5576	5714	5959	6159	6241	6367	6442
5	6103	6273	6582	6844	6956	7144	7280
10	6626	6830	7204	7532	7677	7930	8129

Return gas **35** ℃
Subcooling **8.3** K

5 压缩机附件 Accessories

序号 Serial number	名称 Name	数量 Quantity	备注 Notes
1	压缩机 Compressor	1	
2	减震垫 Grommet	4	
3	减震套管 Sleeve	4	
4	接口阀 VALVE	2	根据需要配给 Needed

6.产品的包装、运输和贮存 PACKING，TRANSPORTATION AND STORAGE

6..1 压缩机包装应能避免运输中受潮和损伤，包装箱上的文字标记清晰整齐。

The packing should be moisture-resistant, and prevent the compressor in it being damaged. The letters and marks on the package should be clearly painted.

6.2 压缩机运输和搬运过程中，应保持平稳、轻放、倾斜角不得大于 45°。

Don’t incline the compressor more than 45°.

6.3 压缩机应贮存在室温、无腐蚀性气体存在的环境中。

The compressor should be kept in the place with normal room temperature, and should be kept out of corrosive atmosphere.

7 注意事项　Attention

7.1 压缩机不得被当作系统抽真空的工具使用，确保系统制冷剂充注完成后才能启动；

It is not allowed to perform vacuum in the system by using the refrigeration compressor. The compressor can start only after the refrigerant is charged;

7.2 不能直接从压缩机的吸、排气管等接口及附近充注制冷剂，尽量选择从气分、储液罐等远离压缩机接口的位置充注制冷剂，防止液态制冷剂迁移进入压缩机吸气腔内，造成带液启动；

It is not allowed to charge the refrigerant from the suction or discharge line closes to the compressor. The charge port should be arranged on the connection pipe of suction line accumulator or receiver, which is far away from the compressor, to avoid the liquid refrigerant flooding back;

7.3 制冷剂充注量参照当地法律法规；

The refrigerant charge amount complies with local regulations;

7.4 不得真空运行、空转或长时间逆转；

It is not allowed to run compressor in vacuum, not allowed to run compressor without refrigerant, and not allowed to run compressor in the reversed direction for long duration;

7.5 不得使用压缩机标明的制冷剂之外的其他气体或物质；

The compressor can only work with approved refrigerants;

7.6 不得超出压缩机标明的运行范围运行，应尽量避免吸气带液启动，正常运行时应保证吸气侧是过热气体；

The compressor is not allowed to work outside its envelope. System design should guarantee the suction line superheat and avoid the liquid refrigerant flooding back;

7.7 压缩机吸气、排气等接口的胶塞打开后，需在 15 分钟内完成焊接和组装工作；

When the suction and discharge plugs are removed, the assembly and brazing should be done in 15 minutes;

7.8 压缩机不得频繁启停，以免压缩机内润滑油随制冷剂被大量地排出压缩机；连续运行需 10 分钟以上，应使油回到最低油位以上（最低油位：50%油充注量的位置）；停机再次启动间隔 3 分钟以上，应使高低压达到平衡；

The frequently start/stop compressor should be avoided. The suggested minimum continuous running time is 10 minutes to guarantee the safe oil level (>=50% initial charge volume), the suggested minimum interval between start and stop is 3 minutes.

7.9 低温工况的应用，由于大量制冷剂可能会迁移到压缩机腔体内造成带液启动，建议加装曲轴箱加热装置，曲轴箱加热装置的功率推荐 45W；

A 45W crankcase heater is recommended to avoid the refrigerant migration during the off circle and flooded start. The crankcase heater should be powered on 12 hours earlier before the first start or restart after long duration off;


7.10 系统应配置必要的压力、温度、过流、缺相等保护及回油装置等；

The system should be equipped with necessary protection devices for pressure, temperature, oil return, overcurrent and phase fault, etc.


7.11 压缩机搬运、安装过程中不得平放、倒置，运输及运行过程中最大倾斜角度 15°；

The compressor is not allowed to lay down or place upside down during transportation, stock and installation. The maximum inclination is 15° when the compressor is running.


8 安装图 Mount Diagram

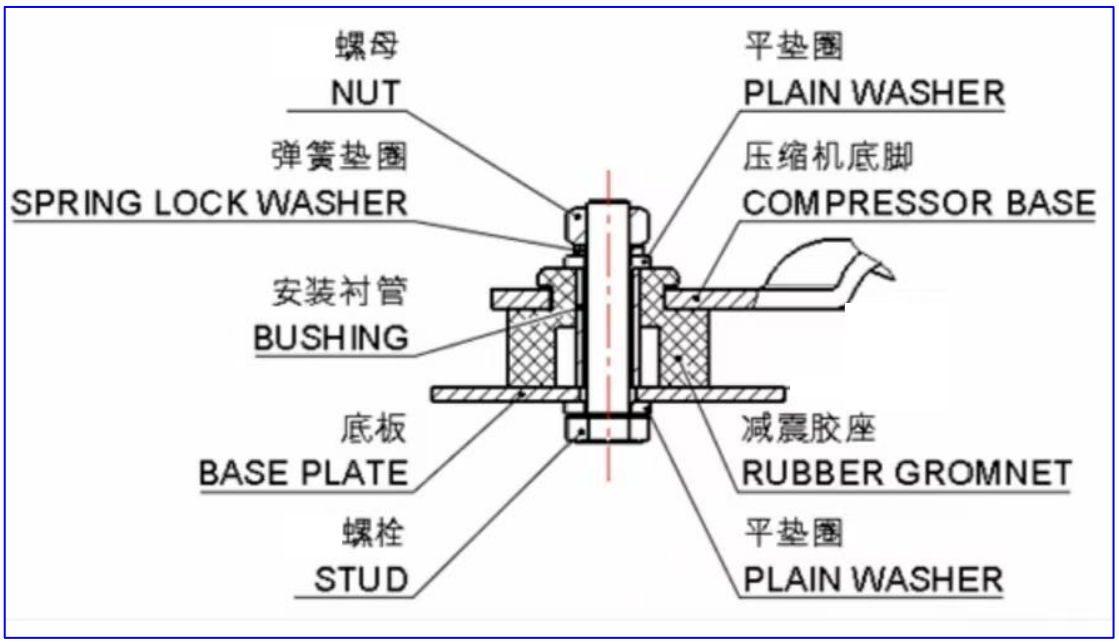

9 接线图　Wiring Diagram

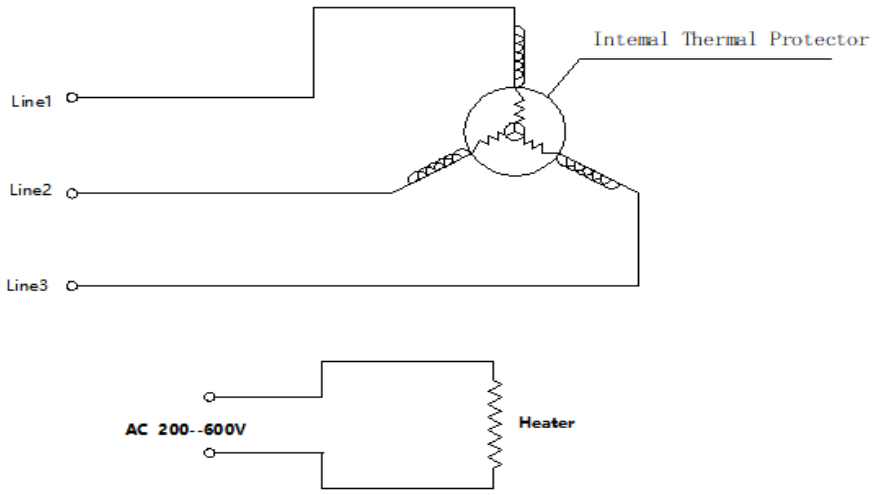

10 活塞式压缩机外形尺寸图 PISTON COMPRESSOR Dimensional Drawing

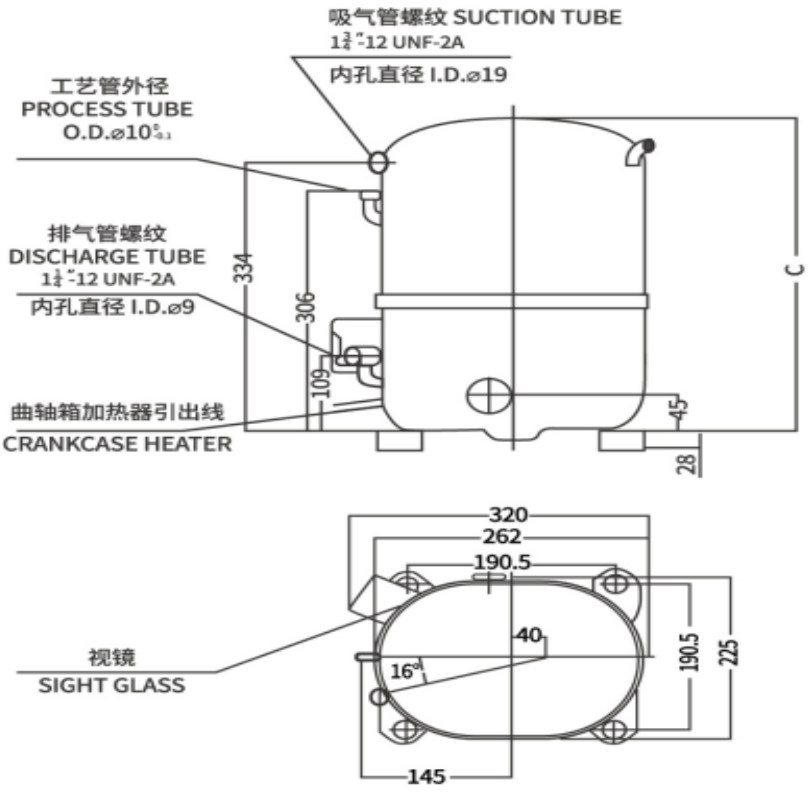

MODEL	C (IN/mm)
QR3-90	15.7/398
QR3-100	
QR3-112	15.7/398
QL3-112	
QR3-124	15.7/398
QL3-124	
QR3-134	15.7/398
QL3-134	