*** 50Hz YH230T1 100Specification**

Specification		Notes
Standard Model	YH230T1-100	Basic Model
Extended Model		
Extended Model		
Extended Model		
Extended Model		
Extended Model		

Revision Record			
Version	Reviser	Description	Date

Checked by _____ Date _____

Approved by _____ Date _____

1 Specification

1.1 Basic Specification

Model	YH230T1-100(Including Extended Model)
Type	Low Side Shell Design Scroll Compressor
Application	Air conditioning
Refrigerant	R407C
Displacement(cc/rev)	123
Cooling Capacity(W)[a]	22180
Input Power(W)[a]	6770
RLA(A)[a]	12.9
Cooling COP(W/W)[a]	3.28
Power Supply	380-420V/3~/50Hz or 460V/3~/60Hz
Min. Operating Voltage(V)	342
Max. Operating Voltage(V)	462
LRA(A)	117
Max. Operating Current(A)[b]	17.6
Rated Speed(r/min)[a]	2900
Compressor Weight(With Oil)(kg)	53
Oil Type	POE
Oil Kinematic Viscosity(cSt, 40℃)	32
Oil Density(kg/L, 20℃)	0.977
Primary Charge(L) Recharge(L)	2.7 2.55
Oil Circulation Rate[a]	≤1%
Rated Sound(Sound Power)(dBA)[c]	73
Max. Operating Sound in Running Envelope (Sound Power)(dBA)	78
Vibration Displacement Peak-Peak(mm)[d]	≤0.12
Moisture(mg)	≤1100
Impurity(mg)	≤140
LVS(V)[e]	323
MOV (V)[f]	342
Start Capacitor(μF/V)	/
Start Relay	/
Run Capacitor(μF/V)	/
IP Class of Terminal Box	IP54
Compressor Color	Black

1.2 Motor Parameters

Motor Type	Three-phase asynchronous motor
Motor Pole	2
Motor Insulation Class(℃)	130(B Class)
Line to Line Resistance UV(CS)(Ω, 25℃)	1.09(±10%)
Line to Line Resistance UW(CR)(Ω, 25℃)	1.09(±10%)
Line to Line Resistance VW(SR)(Ω, 25℃)	1.09(±10%)
Dielectric Strength	2000VAC / 1s / 50Hz, Leakage Current≤5mA
Insulation Resistance(MΩ)	≥20
Ground Resistance(Ω)	≤0.1

1.3 Safety Operating Limit

Tightness Test Pressure(MPa)	3.8-4.0
Max. Operating Pressure	
High Side(MPa) Low Side(MPa)	H3.0/L2.0
Compressor FreeSpace(Without Oil)	
High Side(L) Low Side(L)	H0.9/L6.5
Max. Refrigerant Charge(kg)	See Notes
Discharge Temperature Limit(℃)	≤125 (120mm to compressor discharge connection and well insulated)
Start-Stop Interval	See Notes

Performance Condition：

Condition	Condition Description
a	Rated Condition
b	Max. Load Condition, 90% Rated Voltage
c	Rated Condition, A Weighted Sound Power
d	Rated Condition, Max Operating Normal Displacement of Compressor Housing
e	Discharge Pressure and Suction Pressure: Saturated Refrigerant Pressure at 40℃
f	Max. Load Condition

2 Rated Condition, 48 Hours Break-in-Running before implementing Performance and Sound Testing

Item	Rated Condition	Max. Load Condition
E.T.(℃)/C.T.(℃)/S.H.(K)/ S.C.(K)/A.T.(℃)	7.2/54.4/11.1/8.3/35	11.9/65.5/11.9/8.3/46.1
Cooling Capacity Deviation	≥95.0%	-
Power Deviation	≤105.0%	-
COP Deviation	≥95.0%	-

3 Internal Protector


Protection Method	Config	Parameter		
Internal Overload Protector	With	Vendor	Vendor1	Vendor2
		Model	35HM571-XX	
		Open Temp.(℃)	135±5	
		Close Temp. (℃)	61±9	
		Short Time Trip	87A 2-10s	A s
Internal Pressure Relieve Valve	With	2.76-3.10MPa		

4 Accessory

YH230T1-100			
Item	Name	P.N.	PCS
1	Grommet	070-0003-00	4
2	Sleeve	010-0014-00	4
3			
4			
5			

5 Compressor OperatingEnvelope

5.1 Compressor Operating Envelope

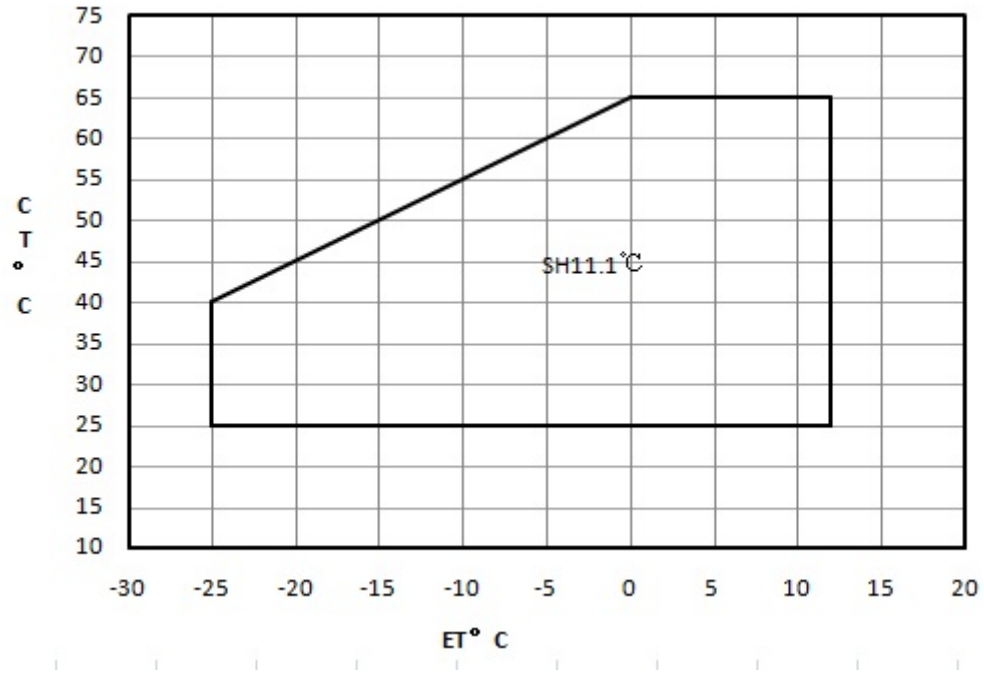

5.2 EVI control logic(only for EVI module)

- Recommend system subcooling 5K
- DLT≤95℃,control superheat of injection line=5K
- DLT＞95℃,control DLT=95℃
- Max injection pressure≤2.0MPa

6 Compressor Performance Sheet

- Performance Based on Superheat is within the OperatingEnvelope, Subcooling after Condenser is 8.3K；
- Performance Calculated by Coefficients of Polynomial is Only Suitable for the Condition within Operating Envelope
- Capacity, Power can be Calculated by Coefficients of Polynomial

6.1 Performance Table

Item	E.T.(℃) / C.T.(℃)	-20	-10	0	10
Heating Cap.(W) (Cooling Cap.	50				
	40				
	30				
Cooling Cap. (W)	50	7628	12129	18054	25735
	40	8667	13563	19969	28216
	30	9676	14894	21708	30448
Power(W)	50	5974	6103	6157	6231
	40	4759	4926	5015	5120
	30	3815	4005	4115	4237

6.2 Ten Coefficients of Polynomial

Expression	z = p0 + p1*x + p2*y + p3*x^2 + p4*x*y + p5*y^2 + p6*x^3 + p7*x^2*y + p8*x*y^2 + p9*y^3		
Description	z:Cooling Capacity(W) or Power (W) Specially: Heating Capacity(W)=Cooling Capacity(W)+Power (W) x: E.T. ℃ y: C.T. ℃ p0~p9: Coefficients of Polynomial		
Cooling Cap. Factor	Value	Power Factor	Value
p0	25916.381568	p0	1746.525201
p1	863.23776	p1	6.716407
p2	-115.90656	p2	92.976437
p3	10.910592	p3	0.018557
p4	-1.936704	p4	0.331462
p5	-0.790879	p5	-1.027
p6	0.055137	p6	0.015707
p7	-0.042626	p7	0.001591
p8	-0.036635	p8	-0.007378
p9	-0.00072	p9	0.018632

Notes：Coefficients of polynomial are based on the fitting results of some sample data, which can be used as a reference of compressor selection, but cannot completely eliminate customer's test.

7 Notes

7.1 It is not allowed to perform vacuum in the system by using the refrigeration compressor.The compressor can start only after the refrigerant charged. In some cases, such as on the field site, if it is limited by the situation that can't charge the required volume of refrigerant, 50% of the required refrigerant is charged necessary before the compressor starts. Double check the system and make sure everything is under safe status, then power on the compressor and charge the remained refrigerant when the compressor is running.

7.2 It is not allowed to charge the refrigerant from the suction or discharge line closes to the compressor. The charge port should be arranged on the connection pipe of suction line accumulator or receiver, which is on the side far away to the compressor, to avoid the liquid refrigerant flood back.

7.3 Refrigerant charge limitation: the ratio between the weight of oil and refrigerant should be >=0.4.

7.4 It is not allowed to vacuum by compressor, not allowed to run the compressor without refrigerant, and not allowed to run the compressor on the reversed direction for long duration.

7.5 The compressor can only work with approved refrigerant.

7.6 The compressor is not allowed to work outside its envelope, the system should guarantee the suction line superheat and avoid the liquid refrigerant flood back.

7.7 When the suction and discharge plugs are removed, the assembly and brazing should be done in 15 minutes.

7.8 The frequently start/stop should be avoided. The suggested minimum continuous running time is 10 minutes to guarantee the safe oil level (>=50% initial charge volume), the suggested minimum interval duration between start and stop is 3 minutes.

7.9 The deviation of supplied voltage should be less than +/-10% of rated voltage.


7.10 A 90W crankcase heater is recommended to avoid the refrigerant migration during the off circle and flood start. The crankcase heater should be power on 12 hours earlier than the first start or restart after long duration off.

7.11 The system should be equipped with necessary protection devices, such as pressure, temperature, oil return, overcurrent and phase fault, etc.


7.12 The compressor is not allowed to lay down or place upside down during transportation, stock and installation. The maximum inclination is 15° when the compressor is running.

8 Drawings


8.1 Outline Drawing

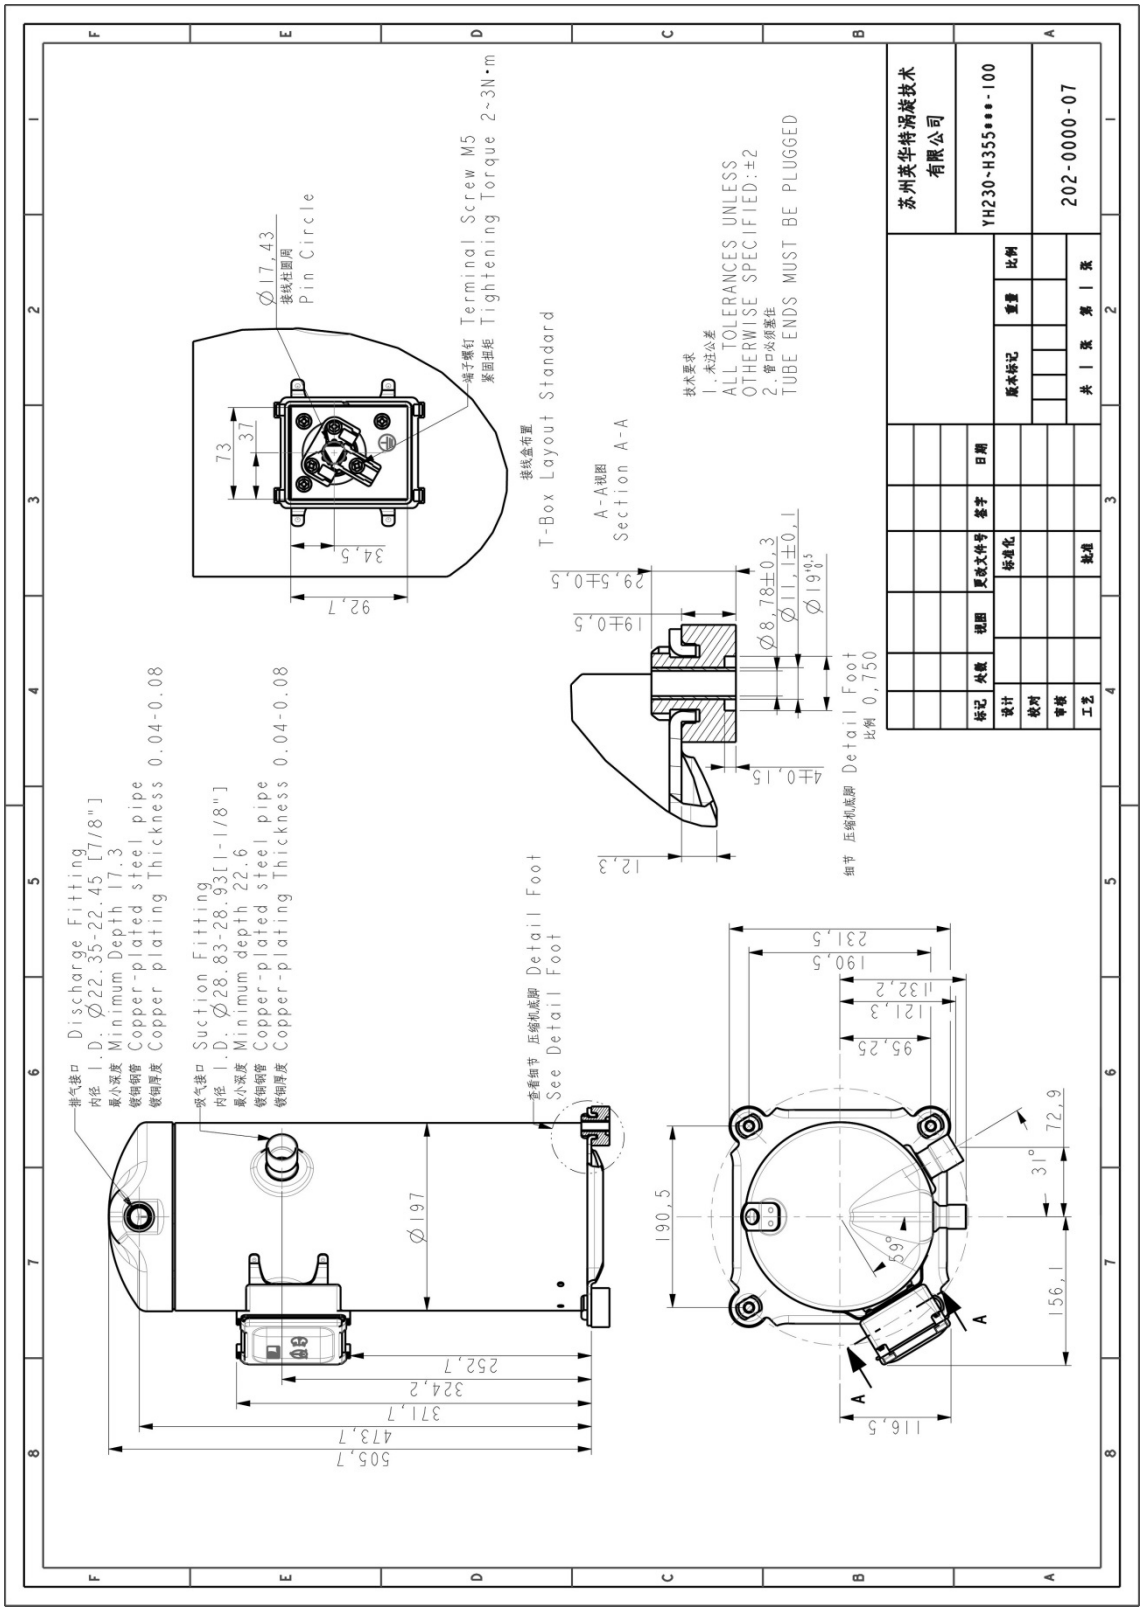

8.2 Sleeve Drawing

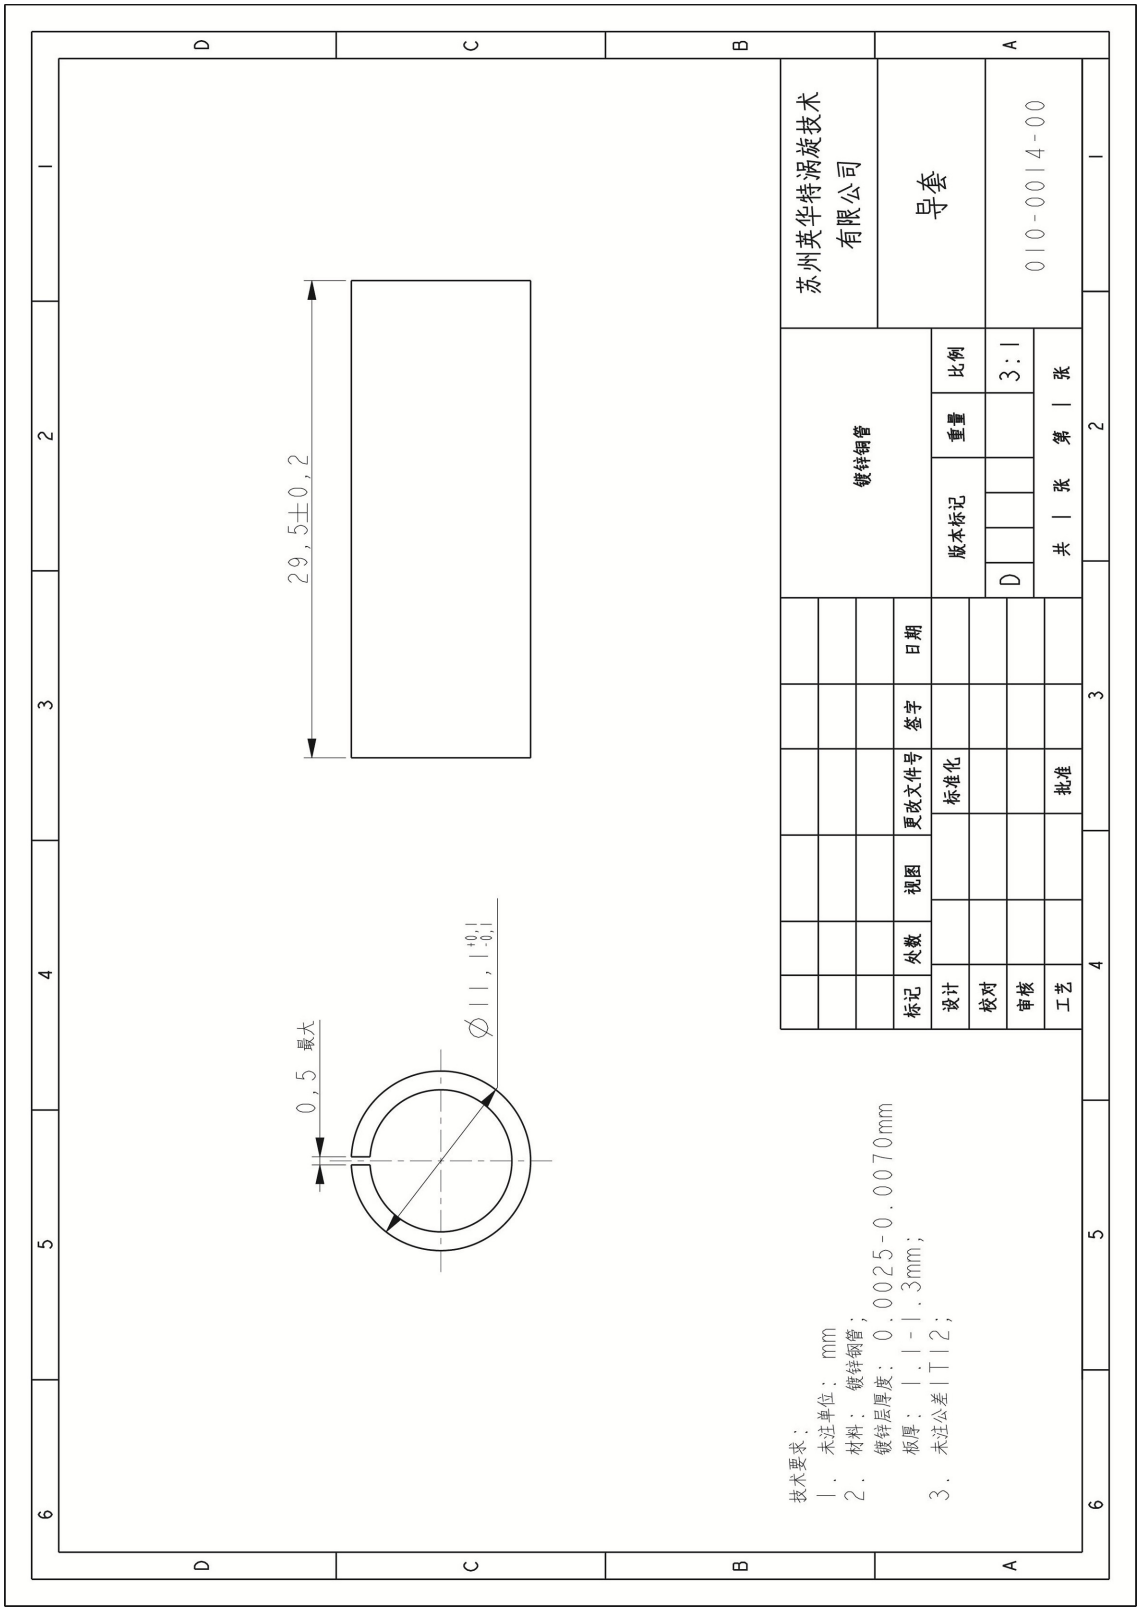

8.3 Grommet Drawing

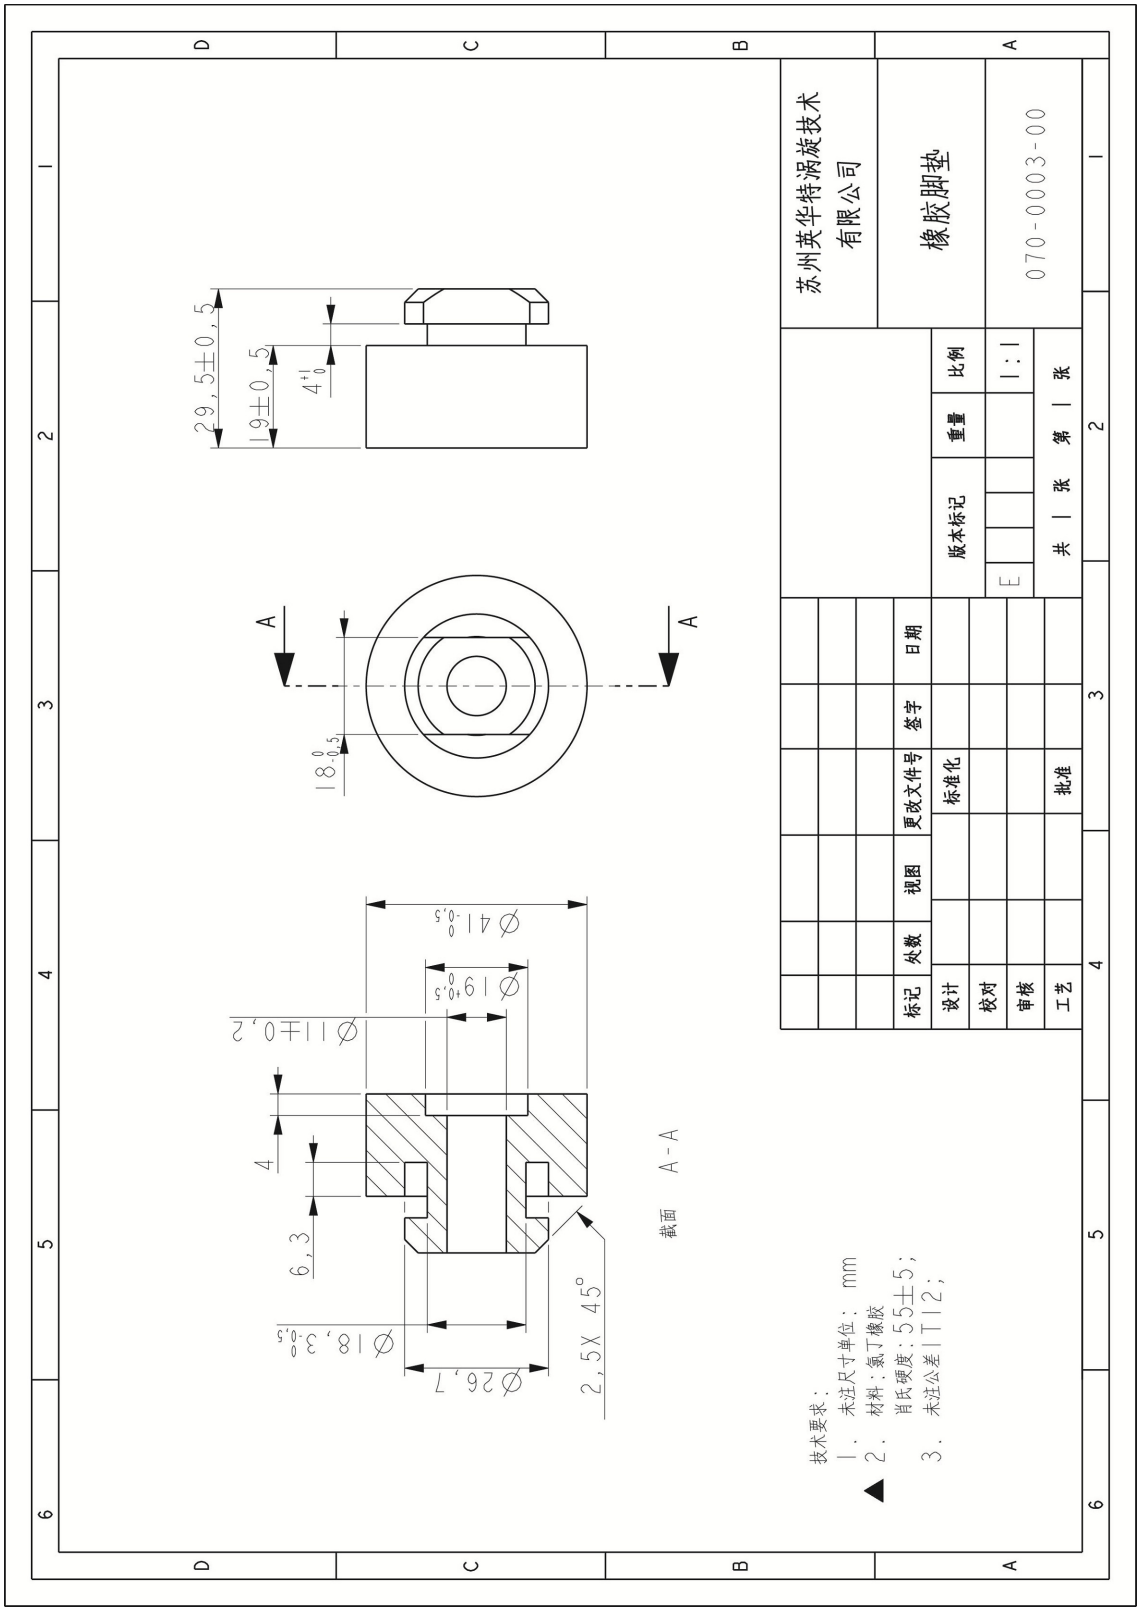

9 Single Phase Compressor Wiring Diagram

Only for single phase

10 Application

See Details in the《YH serial air-condition scroll compressor application manual》